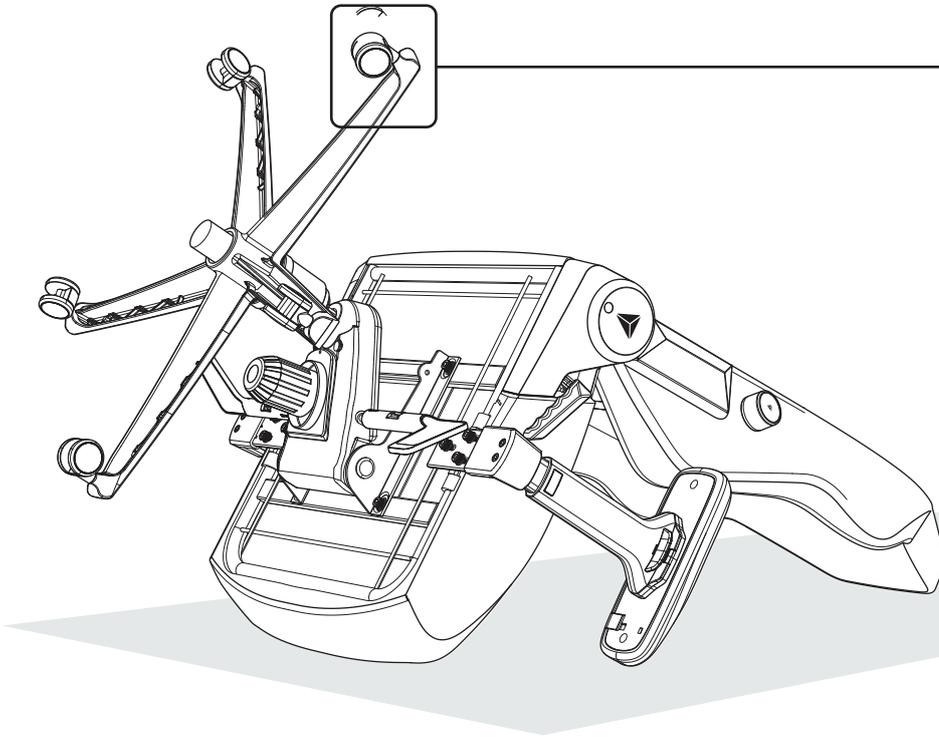



ASSEMBLY GUIDE

01 PREPARE


To begin, lower your armrest to its lowest height. Flip your chair upside down. Ensure that your chair is stable and fully supported by the chair's armrest and backrest.

**02 REMOVE**


Pull out your existing set of casters from the wheelbase.

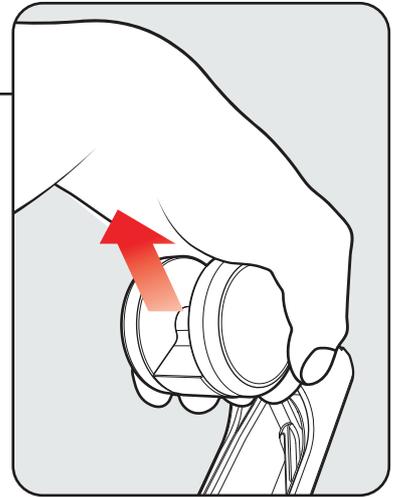**03 INSTALL**

Insert your lockable casters by fully pressing in each stem into the respective wheelbase sockets.

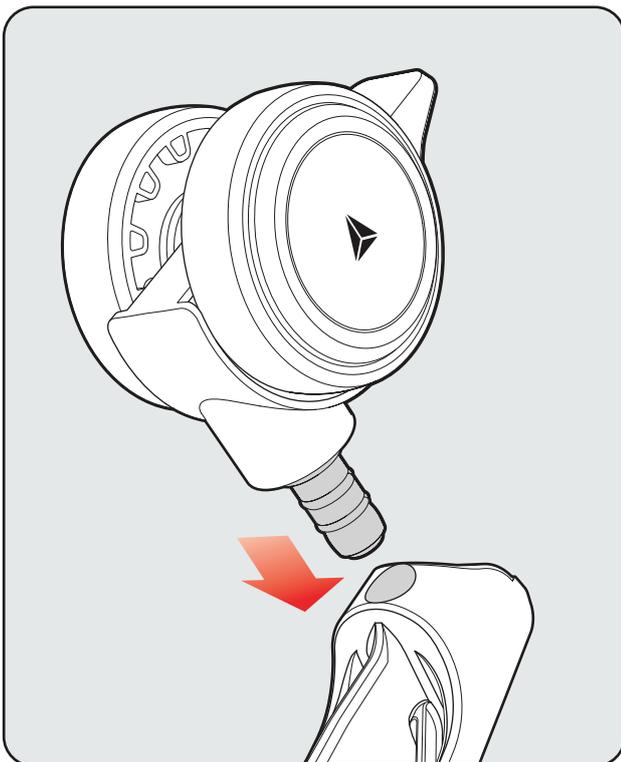
**04 REVERT**

Carefully tilt the chair upright while holding the wheelbase.

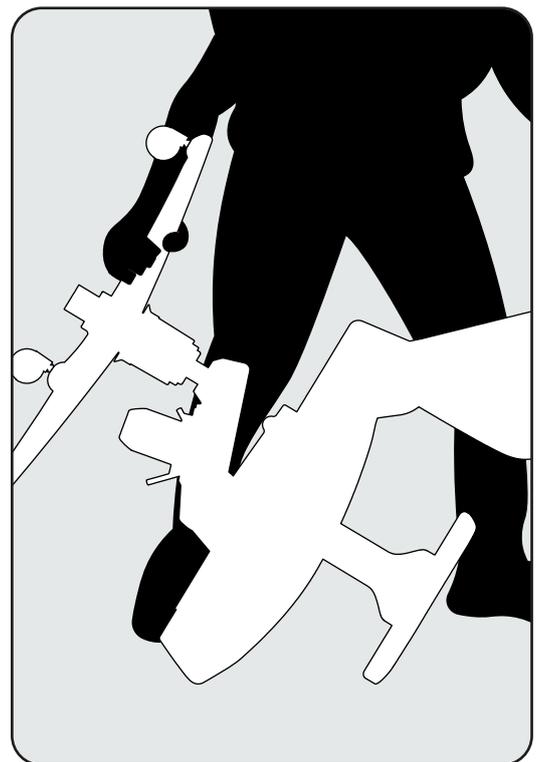

LOCK


Flip pedal downwards to lock.

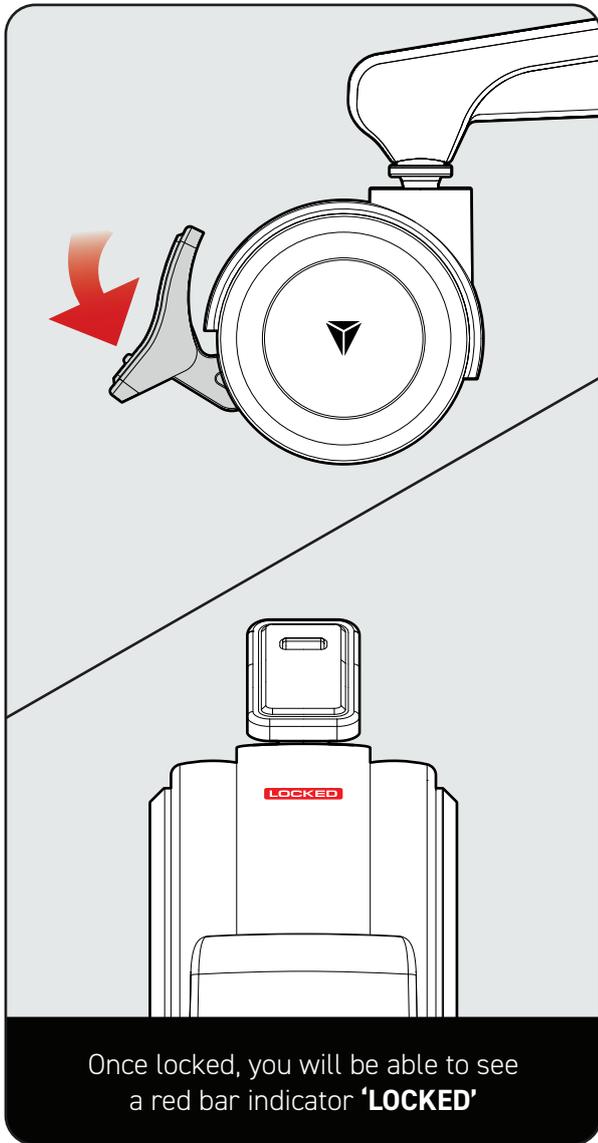

Once locked, you will be able to see a red bar indicator 'LOCKED'

UNLOCK

Flip pedal upwards to unlock.

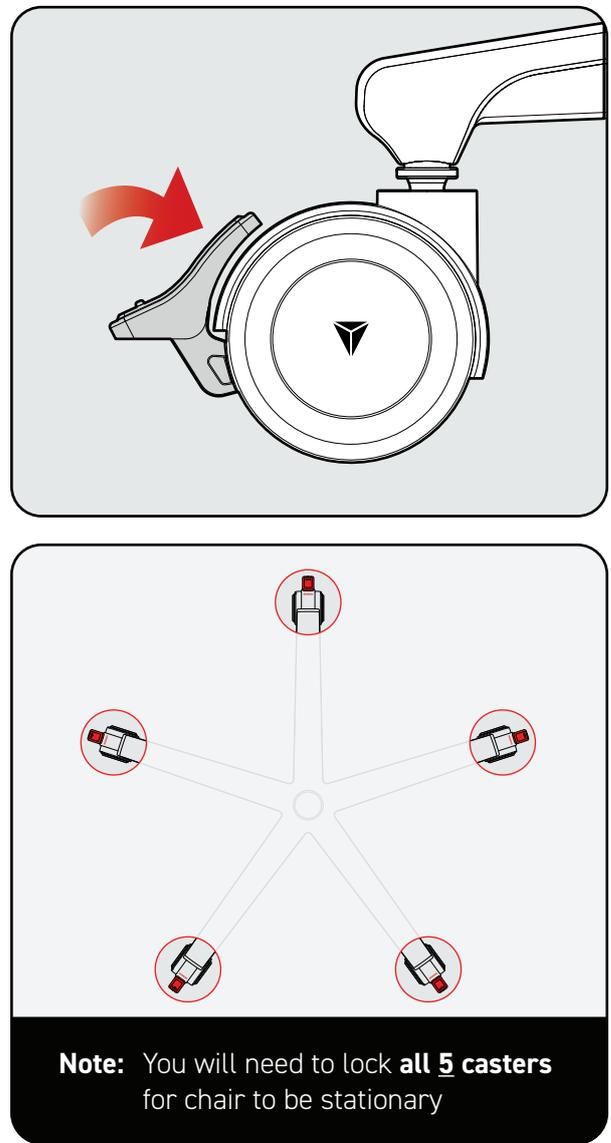

Note: You will need to lock all 5 casters for chair to be stationary

NEED ANY HELP?



For additional support and full warranty terms and conditions, please scan the QR code or visit our website

secretlab.co/support