


Congratulations and welcome to the next level of ergonomic performance. Only a few steps remain before you experience the ultimate sitting comfort.

We've put together a quick start guide to help you assemble your Secretlab chair. We also recommend checking out our Assembly Video for more detailed, visual instructions.

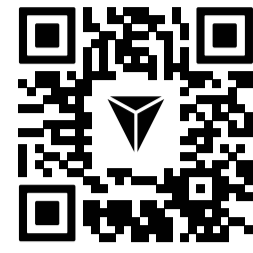

ASSEMBLY VIDEO

Scan this QR code or visit secretlab.co/pages/resources to watch our full assembly video.


BEFORE YOU GET STARTED, A FEW POINTERS



Having a friend to help can make the assembly process even easier



Read the safety information before use

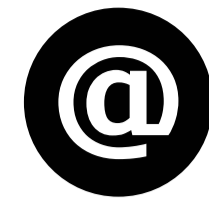

Contact us if you experience any issues

PACKAGE CONTENTS

1x Chair Backrest
1x Chair Seatbase
1x Wheelbase
2x Armrests (Pre-installed)
1x Tilt Mechanism

1x Magnetic Head Pillow
1x Accessories Box
2x Secretlab PU Foam Armrest Tops (CloudSwap™ compatible)

ACCESSORIES BOX CONTENTS

2x Magnetic Side Covers
5x PU Casters (Wheels)
1x Long Allen Key
4x M8 Screws
1x Magnetic Screwdriver Handle
1x Reversible Phillips + Hex Screw Bit

1x Hydraulic Piston + Sleeve
1x Height Adjustment Tilt Lever Handle
1x Tilt Lock Lever Handle

USAGE INFORMATION



BACKREST RECLINE

Pull up FULLY on the lever and lean back slowly until the backrest is at your desired angle, then slowly return the lever to its starting position. Ensure the lever locks back in place.



4D ARMRESTS

Press and hold the 1) front button to move them forward, back or angled sideways, 2) inner side button to move them sideways, and 3) lever on the outside of the armrests to adjust the height.



TILT TENSION

Turn the knob clockwise to loosen the rocking tension of the chair, anti-clockwise to tighten. Adjust according to your weight.



ARMREST ADJUSTMENT

The distance between armrests can be adjusted. Loosen the M8 screws at the bottom of the armrests. Move the armrests to the desired position, then tighten to secure.



LUMBAR ADJUSTMENT

Right knob (while seated): Turn the knob clockwise to increase the lumbar support, anti-clockwise to decrease it. Left knob (while seated): Turn the knob clockwise to raise the position of the lumbar support, anti-clockwise to lower it.



LUMBAR USAGE

Do not put weight on the backrest while adjusting the lumbar support. Do not attempt to turn either knob past its maximum or minimum points. Do not attempt to turn both knobs at the same time.



MULTI-TILT MECHANISM

Right lever (while seated): Pull the right lever up to adjust the height of the chair.
Left lever (while seated): Push down to lock the tilt mechanism and the seat base at your desired angle. Pull up to unlock.



ANTI-COUNTERFEIT VERIFICATION (NFC)

Verify the authenticity of your Secretlab chair and access our assembly video, aftercare guides and other useful information by scanning the embedded tag with a NFC-capable phone.

1 Using the handles on the backrest heat seal bag, gently slide the backrest out of the box. Remove all remaining parts and check that you have received all the parts against the checklist in the top right.



2 Lay out the foam sheets found in the packaging on a flat surface. Place the wheelbase upside down on top of the foam and insert all 5 casters.



3 Turn the wheelbase the right side up and insert the hydraulic piston. Slide the hydraulic sleeve over the piston.



4 Remove the 4 M8 screws pre-installed in the backrest using the hex side of the screwdriver or Allen key.



5 Slide the backrest bracket on the right down onto the right recline bracket until it comes to a stop. Insert the M8 screws previously removed from the backrest. Screw them in halfway.



6 Push the left recline bracket up to align with the screw holes on the left of the backrest. Insert the M8 screws, then tighten all 4 fully on both sides of the backrest using the long Allen key.



7 Install the magnetic side covers by aligning them on top of the backrest brackets. They will snap magnetically in place.



8 Remove the recline strap. Next, use the Phillips screwdriver to remove the red screw marked out by the red safety tab on the right recline cover.



9 Remove the red safety tab. This allows the recline to be used. **Note:** Do not discard the recline safety tab and screw as they can be re-installed for child safety.



10 Lift the chair and gently set it facing downwards.



11 Refer to the sticker label under the seat base for the correct orientation of the tilt levers. Line up the grooves on the inside of the lever handles with the notches and insert fully into the shafts.



12 Ensure the tilt mechanism is facing the correct direction by referring to the same sticker label under the seat base. Attach the tilt mechanism to the bottom of the seat base using the 4 M8 screws, then tighten all 4 fully.



13 Lift the assembled wheelbase and insert the hydraulic piston into the socket of the tilt mechanism.



14 Carefully tilt the chair into an upright position while holding the wheelbase.



15 Install the Secretlab PU Foam Armrest Tops (CloudSwap™ compatible) onto the armrests. They will snap magnetically into place. Congratulations, your Secretlab chair assembly is complete!



SAFETY INFORMATION

The recommended weight load is:
Size S: <90kg (<200lbs)
Size R: <100kg (<220lbs)
Size XL: 80-180kg (175-395lbs)

The chair should only be used as intended and in a non-abusive manner.

For warranty information, please visit the Warranty section on our website.



Sit in the center of the chair, with your back to the backrest.



Do not sit at the front edge of the chair.



Do not stand on the chair.



Do not use the chair with more than one person.



Do not push the chair around when a person is sitting in it.



Do not push down on the backrest when a person is reclined.



Do not place all your weight on the backrest only.



Do not place your hand or fingers near the recline mechanism.



Keep the red recline safety tab secured in place to prevent accidental backrest adjustments when there is a child around.